


DISHWASHER USER GUIDE

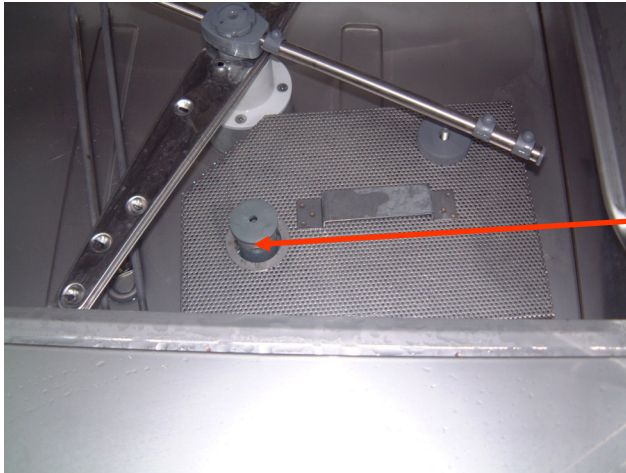

Before attempting to use the dishwasher ensure that this drain plug is firmly seated. You may have to push quite hard.

Then switch on the power at the wall switch above the draining board.



- (1) Close the door and press the **POWER BUTTON**. The machine will start to fill with cold water. It will take about 30 minutes for the water to reach operating temperature. **TEMPERATURE LIGHT** will go out.
- (2) Place the rinsed crockery, etc onto the appropriate tray, close the door and press the **Wash Button**. The wash/rinse cycle will now commence and takes about four minutes. The contents may be removed when the **Wash light** goes out.
- (3) If necessary repeat the process as soon as the **Temperature light** goes out. This should only take a few minutes.
- (4) When all washing is complete press the **Power button** to the off position. Pull out the drain plug and press the **Emptying button** until the machine is empty. Some water will always flow back from the drain pipe.
- (5) Clean out any solid waste which may have accumulated and replace the drain plug.

- (a) Please rinse solid waste off cutlery and crockery in clean water **without detergent** before putting in the dishwasher.
- (b) Use the **brown tray for plates, blue for cups and green for cutlery.**
- (c) **NEVER ALLOW ANY DOMESTIC WASHING-UP LIQUID TO GET INTO THE MACHINE OR IT WILL FOAM.**