

# Dishwasher

## Important information

- ◆ **Switch on the dishwasher AT LEAST 30 minutes before it is to be used.**
- ◆ **The dishwasher is NOT a garbage disposal unit. It will NOT wash properly if very dirty dishes are put inside.**
- ◆ **Scrape food off the plates and preferably rinse before putting into the dish washer.**
- ◆ **Wait a few minutes between loads so that the **Temperature** light goes out before pressing the **Wash** button again. This will ensure a very hot rinse and quicker drying in the air.**
- ◆ **When you have finished all washing, pull out the drain plug (see photo), switch off the power by pressing the **Far Left Button** and then hold pressed the **Far Right Button** until all water has been pumped out. Some water will flow back in when the pump button is released.**
- ◆ **Any remaining solids must be mopped out of the washer before vacating the Hall.**
- ◆ **It may help to pour some hot water into the dishwasher and pump this out to facilitate cleaning. Replace the drain plug ready for the next user. Push the plug in firmly to ensure that it is fully home.**
- ◆ **Please turn off the main switch on this wall when finished.**
- ◆ **The Management Committee reserve the right to levy a fine on users who fail to leave the dishwasher in a clean state.**
- ◆ **If you have any problems, call Tony Woodliffe on 01435 872400 (Mobile 07790 620527).**